

HT100S USER MANUAL

GENERAL SPECIFICATIONS

HT100S is a wired room thermostat. The user can adjust the room temperature with the required temperature and get more comfortable and economic heating.



- Precise Temperature Measurement
- Wired Connection
- ON/OFF Control

HT100S AND EQUIPMENTS

HT100S Room Thermostat

Dowels and Screws


Alkaline Battery

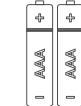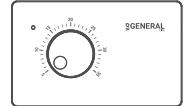

TECHNICAL DATA

Dimensions (H / L / W)	145mm / 90mm / 29.8mm
Operating Current	3V DC (2 x AAA alkaline battery)
Relay NO Switching Current	8A (250VAC – Resistive load) 5A (30VDC – Resistive load)
Temperature Measurement Accuracy	0.1°C
Operating Sensitivity	0.5°C
Operating Temperature Range	(5°C) – (35°C)
Battery Life	1 Year (2 x AAA)
Operating Temperature	(-10°C) – (+50°C)
Storage Temperature	(-20°C) – (+60°C)

ROOM THERMOSTAT


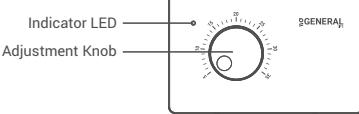


Room Thermostat Indicator LED Descriptions

If it blinks once	The relay contact opens and the heating unit stops working.
If it blinks twice	The relay contact closes and the heating unit starts.


ROOM THERMOSTAT PLACEMENT

Room Thermostat needs to be placed in the room which is used most frequently. For instance; living room or lounge. Placing the Room Thermostat in a spot that have air circulation like entrance of a room or side of window should be avoided. Also anywhere close to heating units such as radiator, stove and spots which get direct sun lights would not be suitable. Room Thermostat needs to be located above the floor 150 cm height. Few trials may be made to find the most convenient spot.

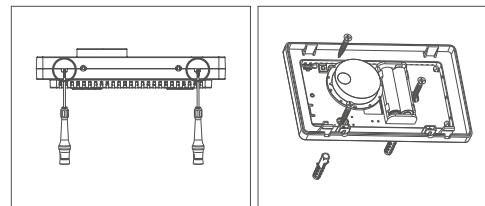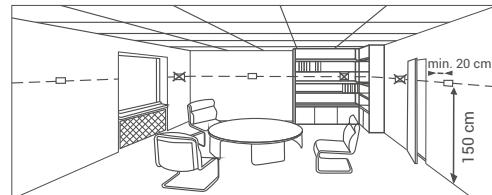

BATTERY PLACEMENT

Before starting, power off the device connected to the Room Thermostat and make sure that the energy is cut off.

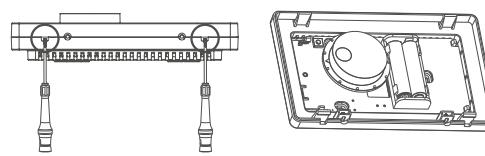


As shown in the picture above, press the screwdriver forward from the space shown, bend the tabs and separate the front cover. Insert 2 new AAA alkaline batteries in the battery housing with the correct battery direction. Replace both batteries at the same time. Then align the front part of your Room Thermostat to the back and squeeze it towards the back.

WARNING!

When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that may occur would be out of warranty.

Please throw your dead batteries into the waste bin for batteries.

ROOM THERMOSTAT WIRING DIAGRAM

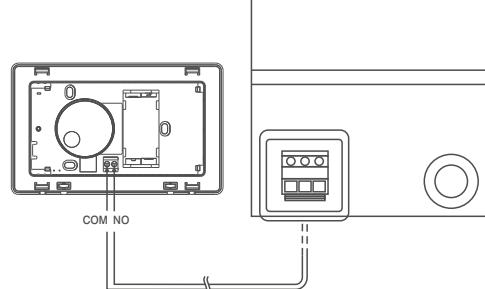


WARNING!

Operations inside the boiler or related to the electrical installation must be carried out by persons with professional competence.

ROOM THERMOSTAT WORKING LOGIC

Your Room Thermostat will start working from the moment you insert the batteries. Your Room Thermostat measures the temperature of its environment every 5 seconds. If the ambient temperature rises 0.5 degrees above the temperature you have set, your Room Thermostat will send a command to the Receiver and turn off the boiler, if it falls below 0.5 degrees, it turns on the boiler. Thus, it ensures that the ambient temperature remains within a certain range.

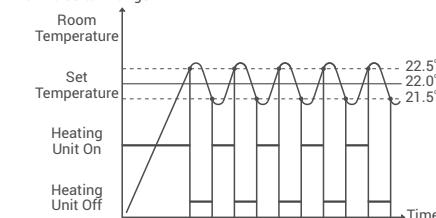

FREQUENTLY ASKED QUESTIONS

• Is my Room Thermostat compatible with my boiler?
If your boiler has on-off connections, your Room Thermostat is compatible. You can learn the information about your boiler from the boiler user manual or your boiler service.

• How will I connect my boiler with my Room Thermostat?
We recommend that the connection between your Room Thermostat and your boiler should be made by professionally qualified persons.
2x0.75 mm cable is sufficient for the Room Thermostat-boiler connection. Connect one end of the cable pair to the room thermostat connection terminals stated in the user manual of your boiler.
Connect the other end of the cable pair to COM and NO inputs of the terminal inside the Room Thermostat as shown in the "ROOM THERMOSTAT WIRING DIAGRAM" section.
The direction of the cable ends does not matter.

DECLARATION OF CONFORMITY

ISIPARK İÇ VE DİŞ TİC. İNŞ. İSİTMA SİSTEMLERİ OTO. SAN. A.Ş. which Head Office and production site is located on Fatih Mah. 1188 Sk.No:13/A Sarnıç-Gaziemir -İZMİR – TÜRKİYE confirms and declares that the product marked with CE and its specifications below is covered by the provisions of the mentioned directive.

Brand : GENERAL Life

Product Name : HT100S

Product Type : Digital Room Thermostat

Compatible Directives:

Electromagnetic Compatibility Regulation 2014/30/EU

(EMC EN 61000-6-3: 2007 + A1: 2011, EN 61000-6-1: 2007)

Low Voltage Directive 2014/35/EU

(LVD EN 60730-2-9:2010, EN 60730-1:2011)

Additional Information: The mentioned product can be used with boilers with on / off output and compliance with the directives only covers the product. ISIPARK is not responsible for the entire system's compliance with the directives. This statement is not valid if changes are made to the product without our approval.

isipark

CE
ISIPARK İÇ VE DİŞ TİC. İNŞ. İSİTMA SİSTEMLERİ OTO. SAN. A.Ş.
Fatih Mah. 1188 Sokak No:13/A Sarnıç/İZMİR
Tel: (0232) 457 99 50 Fax: (0232) 457 91 22
Mersis No: 0461/62137000016
Gaziemir V.D. 466 073 1206

ISIPARK reserves the rights of changing product specifications and user manuals.

*For all changes, you may visit generallife.com.tr

Manufacturer

Title: ISIPARK İÇ DİŞ TİC. A.Ş.

Address: Fatih Mah. 1188 Sk. No:13/A Sarnıç

Gaziemir Izmir-TÜRKİYE

Tel: +90 (232) 457 99 50

Fax: +90 (232) 457 91 22

E-mail: generallife@generallife.com.tr

Authorized Signature:

Company Stamp:

isipark

ISIPARK İÇ VE DİŞ TİC. İNŞ. İSİTMA SİSTEMLERİ OTO. SAN. A.Ş.
Fatih Mah. 1188 Sokak No:13/A Sarnıç/İZMİR
Tel: (0232) 457 99 50 Fax: (0232) 457 91 22
Mersis No: 0461/62137000016
Gaziemir V.D. 466 073 1206

Product

Type: Digital Room Thermostat

Brand: GENERAL Life

Model: HT100S

Warranty Period: 5 Years

Max. Time to Repair: 20 Days

Bandrol and Serial Number:

WARRANTY CONDITIONS

1-The warranty period starts from the invoice date and warranted against manufacturing defects for 5 years.

2-Devices and apparatus are delivered to the customer in working condition in our company. On-site commissioning is subject to a service fee.

3-The repair of the devices and apparatus covered by the warranty is carried out in our company factory and should send by contracted transportation company. In on-site services, the transportation and accommodation expenses of the service personnel belong to the customer. The shift fee during transportation is added to the service fee and collected in advance.

4-The maintenance of devices and apparatus is done in our company. For the maintenance of the devices and apparatus, the round travel fares belongs to the customer.

5-In case of malfunction of the devices and apparatus whose warranty period continues, it is tested in our company whether the malfunction is caused by a customer manufacturer fault, and it is reported with a report issued by our company.

6-In case of detection of manufacturer-induced errors of devices and apparatus whose warranty period continues, the customer can request a replacement or repair of the devices and apparatus at full expense by the manufacturer, unless it is higher than the product's price.

7-In the event that the faults of the devices and apparatus whose warranty period continues are determined as caused by the customer, all expenses would belong to the customer.

8-Customers should be aware of damages (if there is any) of product and warn manufacturer since the day warranty duration starts. If customer do not warn manufacturer with knowledge of damage, customer lose the rights of article 6.

9-Malfunctions resulting from the use of devices and apparatus contrary to the matters stated in the User Manual are not covered by the warranty.

10-Devices and their apparatus are out of warranty if they are beaten, broken or scratched by the customer.

11-Damages resulting from the use of devices and apparatus belonging to other brands and models without the approval of the manufacturer are not covered by the warranty.

12-Battery leakage and errors due to rust, oxidation and liquid contact by working in acidic /humid environments are not covered by the warranty.

13-When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that will occur are out of warranty.

14-Damages that may occur during the transportation of devices and apparatus are not covered by the warranty. Customers can take a transportation insurance.

15-Damages caused by mains voltage / faulty electrical installation are not covered by the warranty.

16-Devices and apparatus are out of warranty for malfunctions caused by force majeure such as fire, flood, earthquake etc.

17-All of the devices and apparatus, including all their parts, are under the warranty of our company.

18-In case of malfunction of the devices and apparatus within the warranty period, the time spent during repair period is added to the warranty period. The repair period of the product cannot exceed 20 working days. This period starts from the date of notification to the service station of the malfunction related to the product or, in the absence of a service station, to the seller, dealer, agency, representative, importer or manufacturer of the product. Consumer can report the problem by; phone, fax, e-mail, registered and reply paid letter or a similar way. However, in case of a conflict, responsibility of prove is belong to the customer. If the malfunction of the product is not repaired within 20 working days, the manufacturer-producer or importer, has to allocate another product with similar features to the use of the consumer until the repair of the product is completed.

19-Although the consumer uses his/her repair rights, if the product breaks down for 4 times in a year or 6 times in warranty duration and these problems effects main purpose of the product.

(starting from delivery time during warranty)

-Exceeding the maximum time required for repair.

-In the event that the service station is not available, if it is determined that the repair of the defect is not possible with the report prepared (in order) by one of the seller, dealer, agency, representative, importer or manufacturer, a refund or a price discount at the rate of defect can be requested.

20-The customer can make complaints and appeals to consumer courts or consumer arbitration committees.

21-The warranty document must be kept by the customer during the warranty period. If the document is lost, a second document will not be issued. In case of loss, repair and replacement of devices and apparatus will be made for a fee.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....