

HY08 And HY311 Series Heating Thermostat User Manual

Many thanks for your selection of our products and services, and also for your trust and support to us.



HY08WE-1/HY08WW-1



HY08WE-4/HY08WW-4



HY08WE-2/HY08WW-2



HY08WE-3/HY08WW-3

Product Specifications

- ★ Power: 90-240Vac 50/60Hz
- ★ Display accuracy: 0.5°C
- ★ Probe sensor: NTC(10k)1%
- ★ Contact capacity: 3A/250V(WW);16A/250V(WE)
- ★ Working environment temperature: 0~90°C
- ★ Range of temperature adjustment: 5~35°C
- ★ Range of temperature display: 0~40°C
- ★ Insulating condition: Normal environment
- ★ Running program: Set per 1 week as a cycle
- ★ Output: Switch relay
- ★ Installation: Wall mounted or on battery seat
- ★ Size(mm): 86*86*27

Before wiring and installing


1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure the produce is suitable for your application.
3. Installer must be a trained experienced service technician.
4. After installation is complete.check out produce operation as provided in these instructions

CAUTION


Electrical shock or equipment Damage Hazard. or short equipment circuitry.

Disconnect power supply before installation

Wiring Diagram

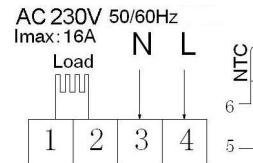


Electric heating wiring diagram

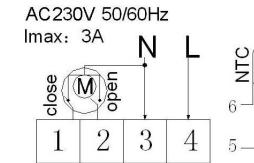


Water heating wiring diagram
(do not connect terminal "close 4" of electric valve)

AC 230V 50/60Hz
Imax: 3A

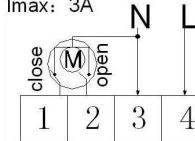

Displays

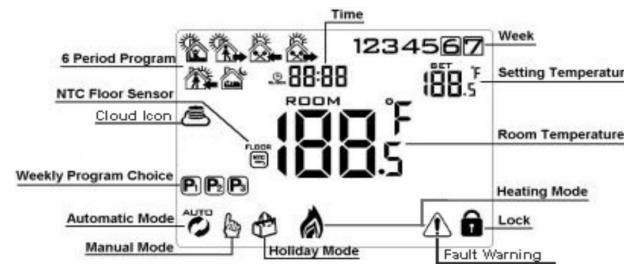

Description of icon

	Auto mode;run preset program
	Clock
	Holiday mode, Holiday days and temperature can be set to run in countdown mode
	Heating,icon disappears to stop heating
	Cloud icon
	Manual mode
	External NTC sensor
	Child lock
	Fault Warning

Operation key

NO	symbols	represent
A		Turn ON/OFF:Short press to turn on/ turn off
B		1 Short press to switch automatic mode and manual mode 2 Turn on thermostat, long press for 3-5 seconds to enter into programmable setting 3. Turn off thermostat, long press for 3-5 seconds to enter into advanced setting
C		1 Confirm key: use it with key 2 Only short press it to set time 3 Turn on thermostat, long press it for 3-5seconds to holiday mode setting. Appear

		OFF, press or change to ON, then press / to confirm opening holiday mode
B		1 Decrease key 2 Long press to lock/unlock
D		1 Increase key : 2 Long press to inquire external sensor temperature 3 In the Auto model, press or enter to temporary manual mode

Programmable

5+2 (factory default), 6+1 and 7 models 6 times period setting for user choose. In the advanced options choose model of you need, under power on state, long press / for 3-5 seconds enter into programming mode setting, then short press / choose: hour, minute, time period, and press and to adjust data, finished setting, about 10 seconds will automatic save and exist.

Wake up	Out door	Back home	Out door	Back home	Sleep
6: 00	20°C	8: 00	15°C	11: 30	15°C

The optimum comfort temperature is 18°C-22°C.

Advanced options

Turn off thermostat, long press / for 3-5 seconds to access advanced setting.

From A1 to AE, short press / to choose the option, and adjust data by , , short press / to switch next option. Remain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
A1	Measure Temperature Calibration	-9~+9°C	Display current temperature 0.5°C Accuracy Calibration
A2	Temperature control return difference setting	0.5-2.5°C	1°C
A3	External sensors limit temperature control return difference	1-9°C	2°C
A4	Options of sensor control	N1:Built-in sensor (high temperature protection close) N2:External sensor (high temperature protection close) N3:Built-in sensor control temperature ,external sensor limit temperature (external sensor detect the temperature is higher than highest temperature of external sensor, thermostat will disconnect relay,turn off load)	N1
A5	Children lock setting	0:half lock 1:full lock	0
A6	Limit value of high temperature for external	1. 35°C-70°C 2. Under 35°C, screen display , high	45°C

	sensor	temperature protection was cancelled	
A7	Limit value of low temperature for external sensor(anti-freeze protection)	1. 1-10°C 2. Exceed 10°C, screen display , Low temperature protection was canceled.	5°C
A8	Setting temperature lowest limit	1-10°C	5°C
A9	Setting temperature highest limit	20-90°C	35°C
AA	Descaling function	0:Close descaling function 1:Open descaling function (valve is continuously closed over 100 hours , it will be opened for 3 minutes automatically)	0:Close descaling function
AB	Power with memory function	0:Power with memory function 1:Shutdown power after power off 2:Shutdown power after power on	0:Power with memory function
AC	Weekly programming selection	0: 5+2 1: 6+1 2: 7	0: 5+2
AD	The ventilation mode running time setting	1:5minutes,continue to reduce,cancel ventilation mode running 2:5-60minutes	5
AE	Restore factory defaults	Display A o, press / key whole show	

Return difference : limit valve of external sensor is 45°C for factory default (A6), value of external sensor control return difference (A3) is 2. when temperature rise to 45°C, then relay stop working and will remind high temperature production alarm. If temperature decline to 43°C relay continue to work and heating alarm will be relieved. (it can be operated ,only when indoor temperature is lower than setting temperature)

Sensor fault display: please choose correct working way of built-in and external sensor, if choose wrongly or sensor fault (breakdown), "E1" or "E2" will be displayed on the screen. Thermostat will stop heating until the fault is eliminated

Warranty:

We offer the warranty of 18 months, from the sales day. The products of our company can have lifetime warranty ,if it is not the quality problems, or beyond the warranty period, we will charge for the after-sale service.

Installation

